



ASSEMBLY INSTRUCTIONS

SS3025



BASE SIZE: 3.020m x 2.520m

**CONGRATULATIONS ON PURCHASING A DURATUF SMARTSTORE SHED.
BEFORE YOU BEGIN THE ASSEMBLY PLEASE NOTE SOME IMPORTANT POINTS:**

BEFORE YOU START:

- *Read all instructions carefully*
- *Identify all parts and check quantities against parts list*
- *Select a level site*
- *Do not mark cladding with pencil as lead can cause corrosion to cladding*

SAFETY:

- *Do not attempt to build your shed in high winds*
- *Beware of sharp edges, recommend use of gloves*
- *Protect your eyes and ears*
- *For ease of assembly, use a friend to help*

TOOLS REQUIRED:



DRILL



RIVETER



PHILLIPS DRILL BIT



3.5 & 10 DRILL BIT



LADDER



HAMMER



NAIL PUNCH



TAPE MEASURE





























PEN

WARRANTY REQUIREMENTS:


Following are the minimum requirements for cladding used in Smartstore Sheds.

- *Wash all surfaces annually using a hose and soft nylon brush.*
- *Within 2 km of coast – wash every 3 months as above. After a storm, wash the cladding and the gutters as soon as possible to remove any highly corrosive salt deposits.*
- *Volcanic Ash Fallout – wash as soon as possible, removing fall out from roof and gutters.*
- *Do not allow manures, chemicals or other corrosive materials to have direct contact with cladding.*


SS3025 PARTS LIST

DESCRIPTION	QTY	DIAGRAM		DESCRIPTION	QTY	DIAGRAM	
CLADDING				FLASHINGS			
			CHECKED				CHECKED
Front/Back Wall 1.850 m	9		<input type="checkbox"/>	Door Sides 1.810 m	4		<input type="checkbox"/>
Gable Wall Angled 1.880 m (Measurement along centre of sheet)	4		<input type="checkbox"/>	Door Jamb 1.850 m	2		<input type="checkbox"/>
Gable Wall Angled 1.940 m (Measurement along centre of sheet)	4		<input type="checkbox"/>	Door Brace 1.255 m	2		<input type="checkbox"/>
Gable Wall Angled 2.000 m (Measurement along centre of sheet)	2		<input type="checkbox"/>	Door Brace 0.975 m	2		<input type="checkbox"/>
Roof 1.350 m	12		<input type="checkbox"/>	Weatherstrip 1.810 m	1		<input type="checkbox"/>
Door 3/4 Sheet 1.810 m	3		<input type="checkbox"/>	Barge 1.350 m	4		<input type="checkbox"/>
TIMBER				Ridge Flashing 1.800 m	2		<input type="checkbox"/>
Bottom Plates - H4 (Green) Front/Back 3.020 m	2		<input type="checkbox"/>	Padbolt Support (Front) 0.140 m	1		<input type="checkbox"/>
Bottom Plates - H4 (Green) Sides 2.520 m	2		<input type="checkbox"/>	Padbolt Support (Back) 0.100 m	2		<input type="checkbox"/>
Top Plate - H1 (Red) Front/Back 3.020 m	2		<input type="checkbox"/>	Spouting 3.050 m	2		<input type="checkbox"/>
Top Plate - H1 (Red) Sides 2.520 m	2		<input type="checkbox"/>	HARDWARE			
Ridge Beam - H1 90 x 45 3.020 m	1		<input type="checkbox"/>	Hardware Pack	1		<input type="checkbox"/>
Jack Studs - H1 45 x 60 0.200 m	2		<input type="checkbox"/>	Paint & Brush	1		<input type="checkbox"/>
CHANNELS				OPTIONAL			
Door Top/Bottom 0.945 m	2		<input type="checkbox"/>	Bolt Down Kit	1		<input type="checkbox"/>
Door Top/Bottom 0.495 m	2		<input type="checkbox"/>				
				DATE: _____			
				PACKED BY: _____			

PARTS LOCATION

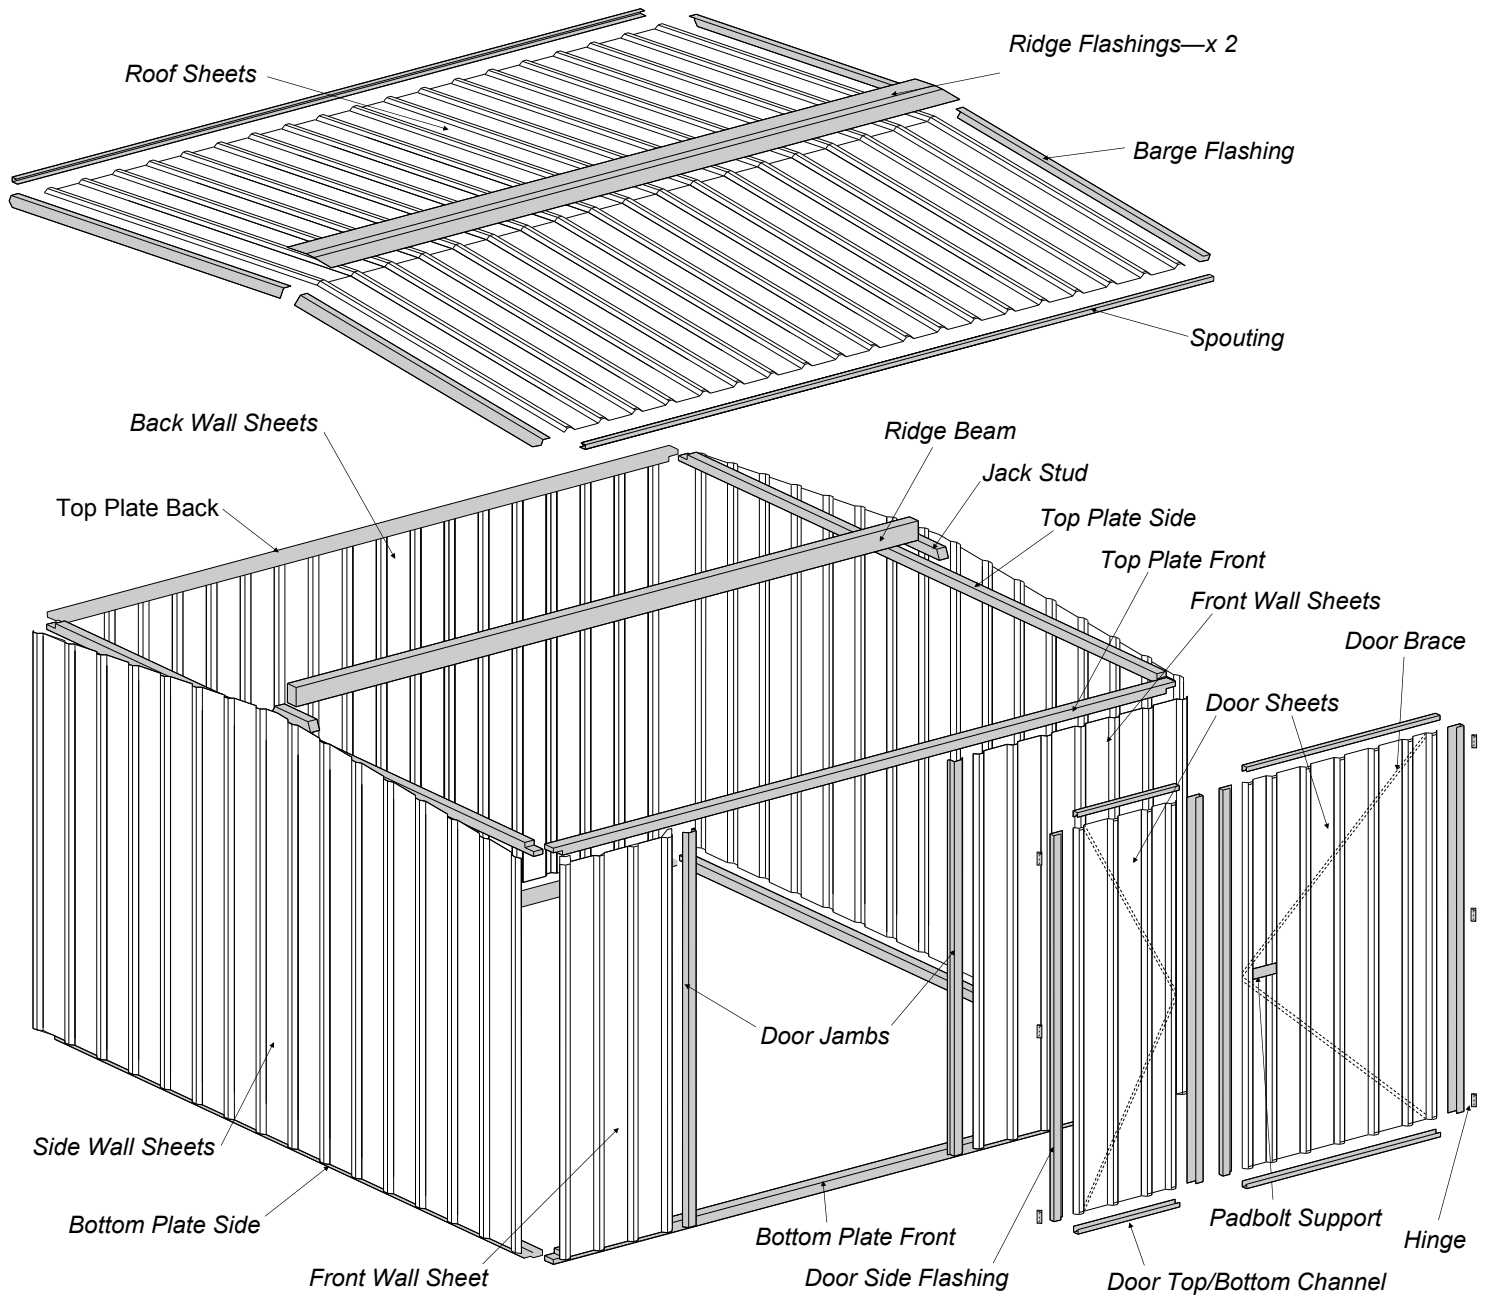

QUICK OVERVIEW

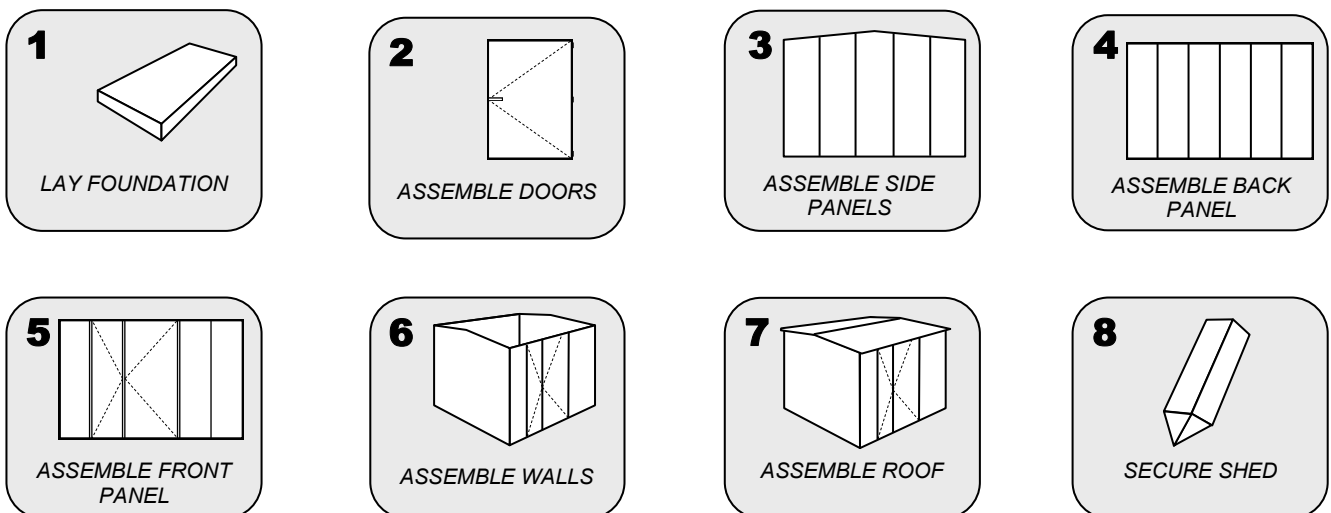



No doubt by now you will have decided what sort of base you are putting down.

Please read the section that applies to your situation.

If you choose to pour a concrete base you will need to decide whether you wish to raise the base plate of your shed. This allows the cladding to protrude below the surface of the concrete and ensures a water tight pad.

See concrete pad specifications below


By choosing this option you will need to make the pad to the specification below.

RAISED BASE PLATE OPTION

(For sheds placed on a raised concrete floor)

- During construction, you may raise the bottom timber plate to allow the wall cladding to protrude 20mm below the bottom plate. This will stop water flowing between the bottom plate and the concrete floor.


See note on page 7.

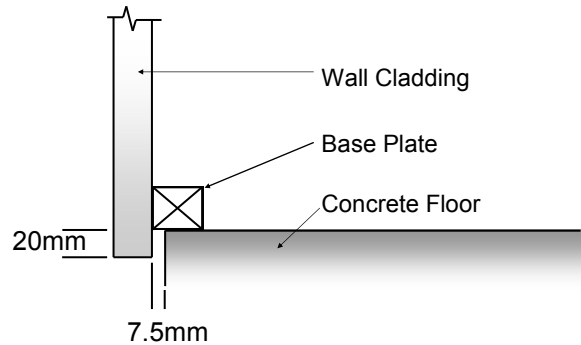

CONCRETE SLAB FOR RAISED BASE PLATE SHED


To build a raised concrete slab for your shed to sit on, we recommend the following:

- The raised slab size should be 15mm smaller than the base size of the shed and at least 30mm above ground line.
- The slab should be 80mm thick in the middle and 100mm thick around the edges.
- The slab should be laid on a solid or compacted base.
- Plastic sheeting under slab will prevent moisture coming through from underneath.

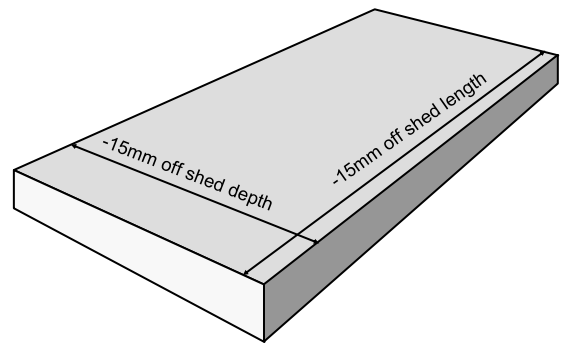

SMARTSTORE WOODEN FLOOR

- The optional Smartstore kitset wooden floor is precut and designed to be fitted into the shed after the shed is assembled.
- Assemble shed as per instructions and fit floor last. (see page 13 for details).

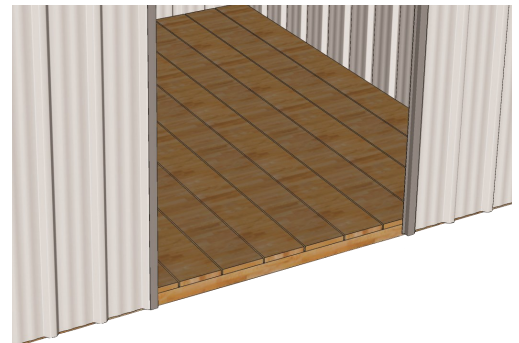



SELECT:

- 3 x 1.810 m Door Sheets
- 2 x 0.945 m Door Top/Bottom Channels
- 2 x 0.495 m Door Top/Bottom Channels
- 4 x 1.810 m Door Side Flashings
- 2 x 1.255 m Door Brace Flashings
- 2 x 0.975 m Door Brace Flashings
- 1 x 1.810 m Weatherstrip
- 6 x Hinges
- 1 x Padbolt Support Flashing
- 70 x Rivets

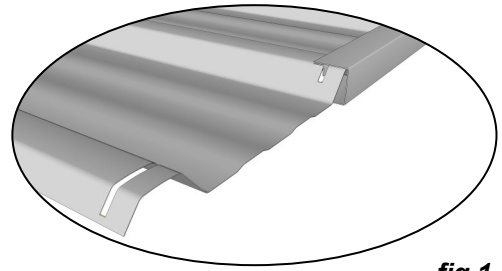


fig.1

LARGE DOOR STEP 1:

- Lay out door sheets on a flat surface making sure narrow pans are on the outside.
- Slide door top and bottom channels on each end as shown in **fig. 1**
- Rivet sheets together.


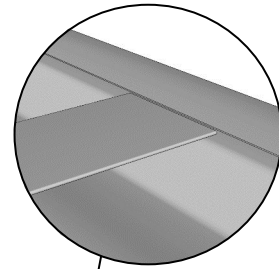


fig.2

STEP 2:

- Position door side flashings and assemble door as shown.
- Drill and rivet as per diagram, ensuring rivets penetrate into door sheet.



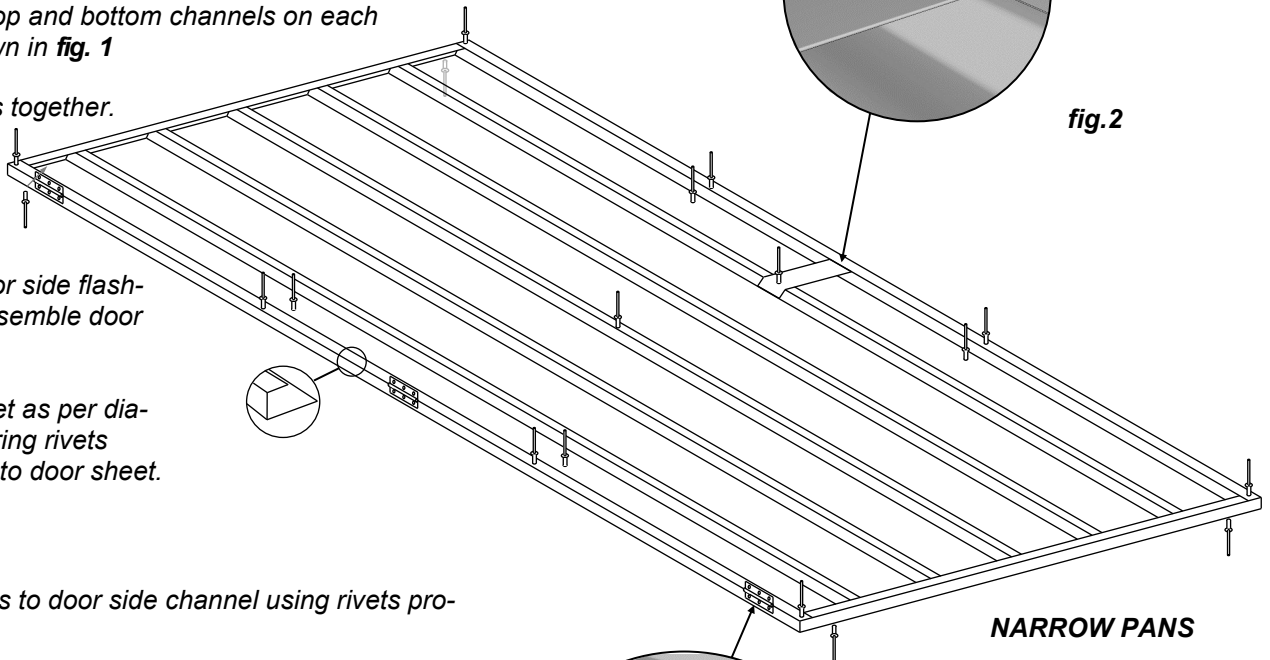


STEP 3:

- Attach hinges to door side channel using rivets provided.
- Using one rivet, attach padbolt support as shown in **fig. 2**

STEP 4:

- Rivet door brace flashings onto back of door as shown. Where possible, rivet from front of door.
- Ensure the door brace flashings are at least 50mm from top and bottom of door, and 10mm from the side to clear top and bottom timber plate, when hung.

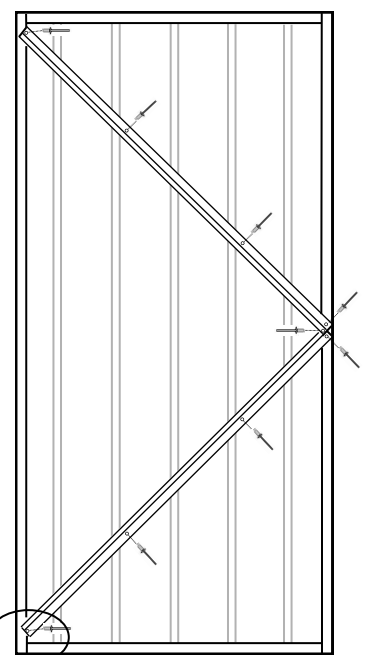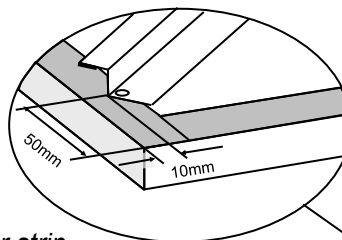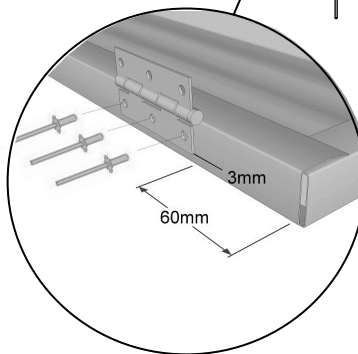

SMALL DOOR:

- Assemble small door in same way as large door using 0.495 m top and bottom channels.
- Before screwing on 0.975m door braces, attach weather strip flashing to back of door side channel using six rivets ensuring it protrudes 20mm out from door side.



SELECT:


- 4 x 1.880 m Gable Wall Sheets (Angled)
- 4 x 1.940 m Gable Wall Sheets (Angled)
- 2 x 2.000 m Gable Wall Sheets (Angled)
- 2 x 2.520 m Top Plates (Red)
- 2 x 2.520 m Bottom Plates (Green)
- 120 x 30mm Galv Clouts
- 16 x Rivets

IMPORTANT—IF YOU CHOOSE TO RAISE YOUR TIMBER BASE PLATE –READ THE FOLLOWING;

For sheds with Raised Base Plate option only (see page 5), deduct 30mm from measurement shown between Top and Bottom Plates on all wall panels, so cladding protrudes 20mm below bottom plate.


STEP 1:

- Lay out 1 x Top plate and 1 x Bottom plate on a flat surface as shown (corner cut-outs to face outwards). **Measurements between Top and Bottom plates are critical to ensure wall panels fit together.**

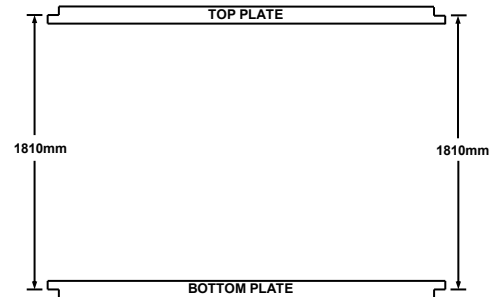

STEP 2:

- Place 2 x 1.880 m wall sheets, 2 x 1.940 m wall sheets and 1 x 2.000m wall sheet on top of timber plates with bottom of sheets flush with each other.
- Rivet sheets together on overlaps as shown.

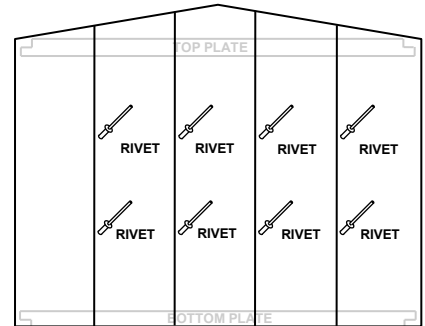

STEP 3:

- Nail wall sheets to the Top Plate at each end making sure that the top corners of the sheets are flush with the top of the Top Plate and that the sides of the wall sheet overhang the Top Plate by approx 15mm as shown.
- Check that the Top Plate is straight then nail the Wall sheet to the Top Plate, 2 clouts per pan. (see fig. 1).



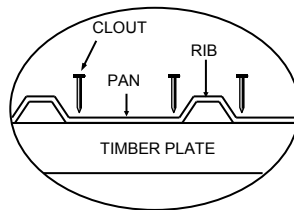


fig.1


Std Shed — Bottom Plate will protrude below wall sheet by approximately 10mm.

Raised base plate shed — Wall sheet will protrude below the Bottom Plate by 20mm.

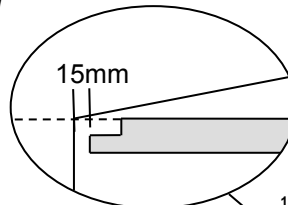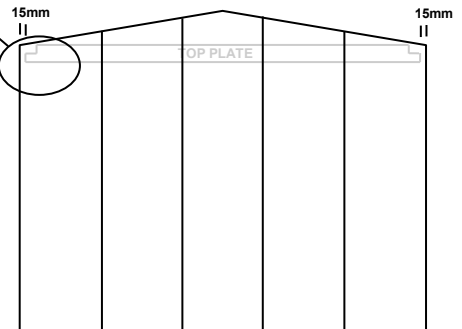

STEP 4:

- Nail the wall sheets to the Bottom Plate at each end ensuring each side of wall sheets overhangs the end of Bottom Plate by 15mm. Check that the distance between the Top and Bottom Plates is correct. (As per diagram in step 1)
- Check that the Bottom Plate is straight then nail the wall sheets to the Bottom Plate, two clouts per pan (see fig. 1).

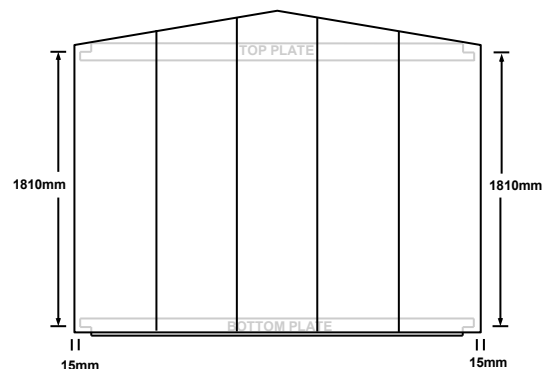

REPEAT THESE STEPS TO MAKE SECOND SIDE WALL PANEL

ASSEMBLE BACK PANEL



SELECT:


6 x 1.850m Wall Sheets
1 x 3.020 m Top Plate (Red)
1 x 3.020 m Bottom Plate (Green)
72 x 30mm Galv Clouts
10 x Rivets

IMPORTANT—IF YOU CHOOSE TO RAISE YOUR TIMBER BASE PLATE —READ THE FOLLOWING;

For sheds with Raised Base Plate option only (see page 5), deduct 30mm from measurement shown between Top and Bottom Plates on all wall panels, so cladding protrudes 20mm below bottom plate.


STEP 1:

- Lay out 1 x Top Plate and 1 x Bottom Plate on a flat surface as shown (corner cutouts to face inwards).

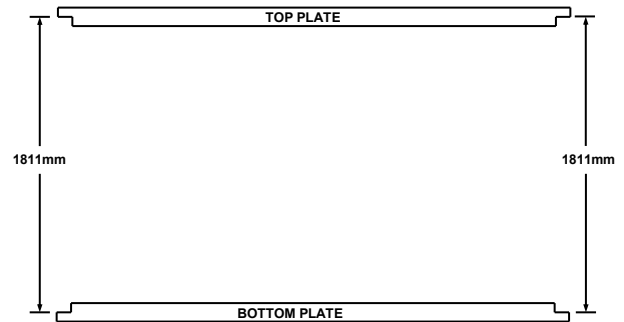


STEP 2:

- Place 6 x 1.850 m wall sheets on top of timber Plates with bottom of sheets flush with each other.
- Rivet the sheets together on overlaps as shown.

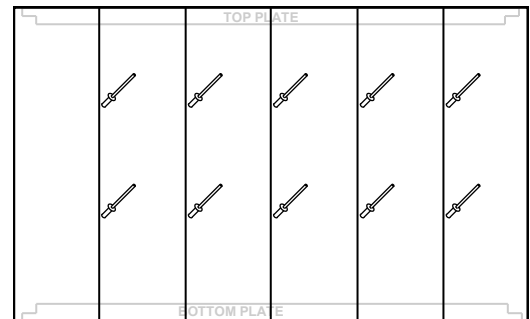

STEP 3:

- Nail the wall sheets to the Top Plate at each end making sure that the top of the sheets are flush with the top of the Top Plate and that the sides of the wall sheets overhang the Top Plate by 15mm as shown.
- Check that the Top Plate is straight then nail wall sheets to the Top Plate, using two clouts per pan.

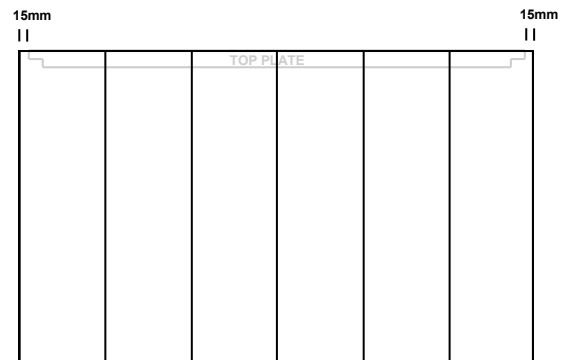


Std Shed — Bottom Plate will protrude below wall sheet by approximately 10mm.

Raised base plate shed — Wall sheet will protrude below the Bottom Plate by 20mm.

STEP 4:

- Nail the wall sheets to the Bottom Plate at each end, ensuring that each side of the wall sheets overhangs the Bottom Plate by 15mm and that the distance between the Top and Bottom Plates is correct. (As shown)
- Check that the Bottom Plate is straight then nail wall sheets to the Bottom Plate, using two clouts per pan.

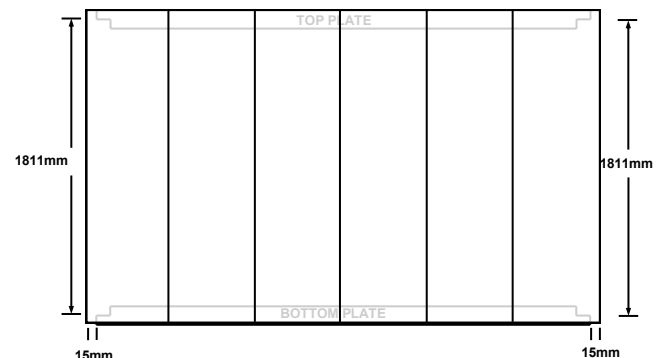

ASSEMBLE FRONT PANEL



SELECT:

- 3 x 1.850 Wall Sheets
- 1 x 3.020 Top Plate (Red)
- 1 x 3.020 Bottom Plate (Green)
- 2 x 1.850 Door Jamb Flashings
- 40 x 30mm Galv Clouts
- 28 x Rivets

IMPORTANT—IF YOU CHOOSE TO RAISE YOUR TIMBER BASE PLATE –READ THE FOLLOWING;

For sheds with Raised Base Plate option only (see page 5), deduct 30mm from measurement shown between Top and Bottom Plates on all wall panels, so cladding protrudes 20mm below bottom plate.

STEP 1:

- Lay out 1 x Top Plate and 1 x Bottom Plate on a flat surface as shown

NOTE: The Doorway is standard at 530mm from left-hand end. To shift the doorway to the right-hand side of the front wall, simply measure 530mm from the right-hand end.

STEP 2:

- Using 2 x 30mm clouts, nail the Door Jamb Flashing flush with the top of the Top Plate at the correct measurement as shown in plan view. Pre drill holes using a 3.5mm drill bit.
- Check the distance between the top and bottom plates then use a further 2 x 30mm clouts to nail the Door Jamb Flashings to the bottom Plate. Pre drill holes.


STEP 3:

- Place 3 x Wall Sheets on timber plates and rivet the sheets together as shown.
- Ensure that the top of the sheet is flush with the top of the Top Plate and that the sides of the wall sheet overhang the Top Plate by 15mm as shown. Nail wall sheets to Top Plate (two clouts per pan).
- Nail the wall sheets to the Bottom Plate making sure that the Plates are the correct distance apart and that the sides of the wall sheets overhang the Bottom Plate by 15mm.
- Drill & rivet Door Jamb Flashings to wall sheets using four rivets equally spaced on each side.





NOTE: Door can be hinged on either side.

STEP 4:

- Place the doors on the panel (In open position, approx 20mm below top plate). Using four rivets, rivet the top and bottom hinges to the Door Jamb Flashing.
- Ensure the doors close properly, then fit remaining rivets.

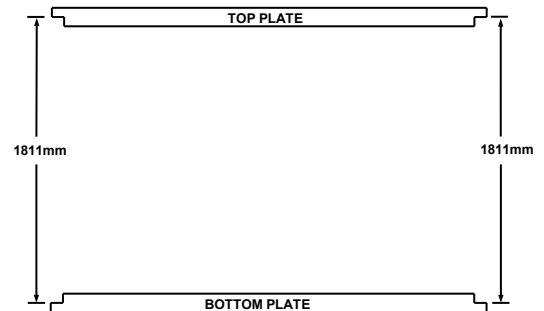

Plan View

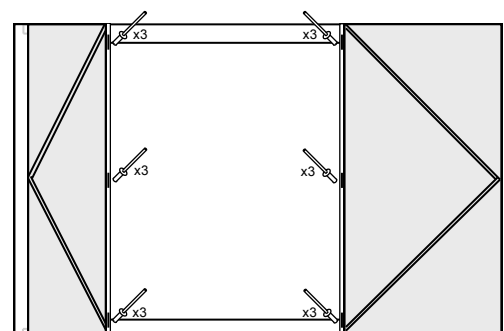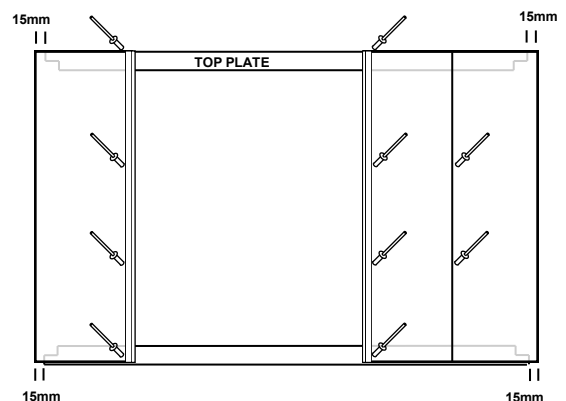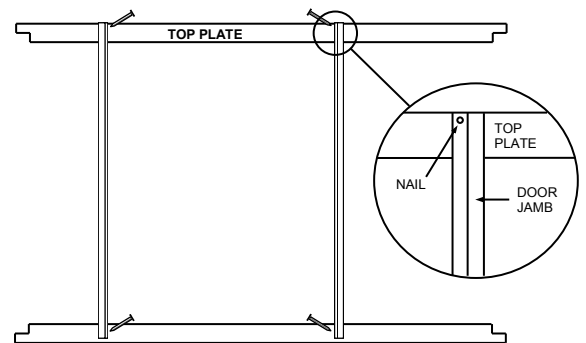




SELECT:

- 4 x Pre-made Wall Panels
- 16 x 40mm Screws
- 16 x Rivets


STEP 1:

- Stand the Back Panel and the Side Panel up using someone to support the panels while they are screwed together.
- Before fixing, ensure that the Side Panel overlaps the Back Panel.
- Using 4 x 40mm screws (2 per join) screw the Top and Bottom Plates together in the corners.

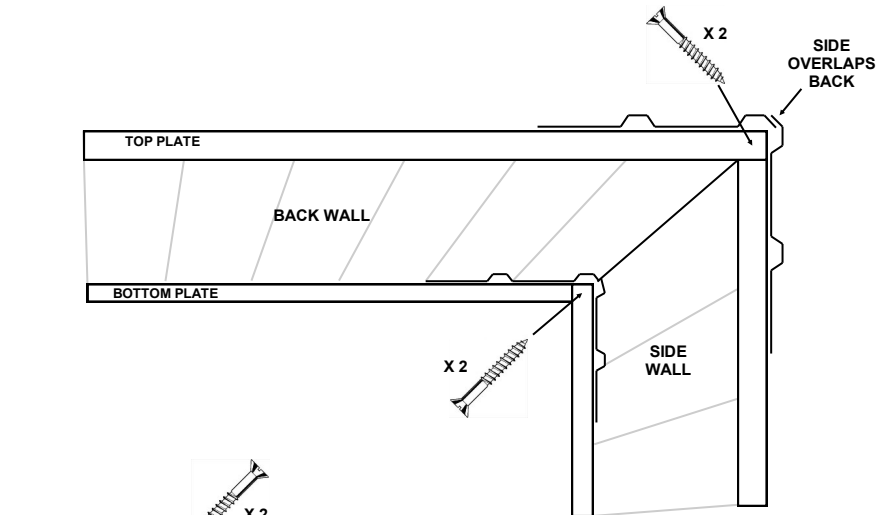


STEP 2:

- Repeat Step 1 with the second Side Panel, ensuring that the Side Panel overlaps the Back Wall Panel.

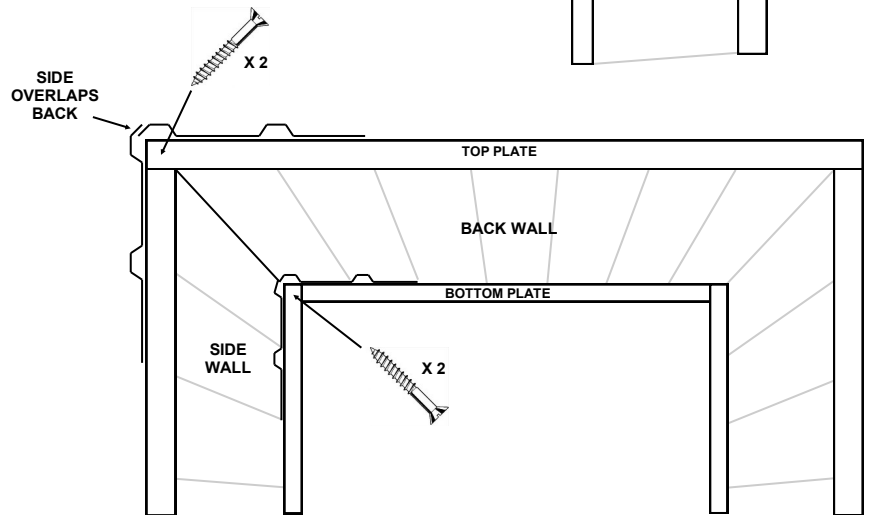

STEP 3:

- Stand up the Front Wall Panel.
- Ensure that the Front Wall Sheets overlap the Side Wall Sheets.
- Using 8 x 40mm screws, screw the Top and Bottom Plates together.

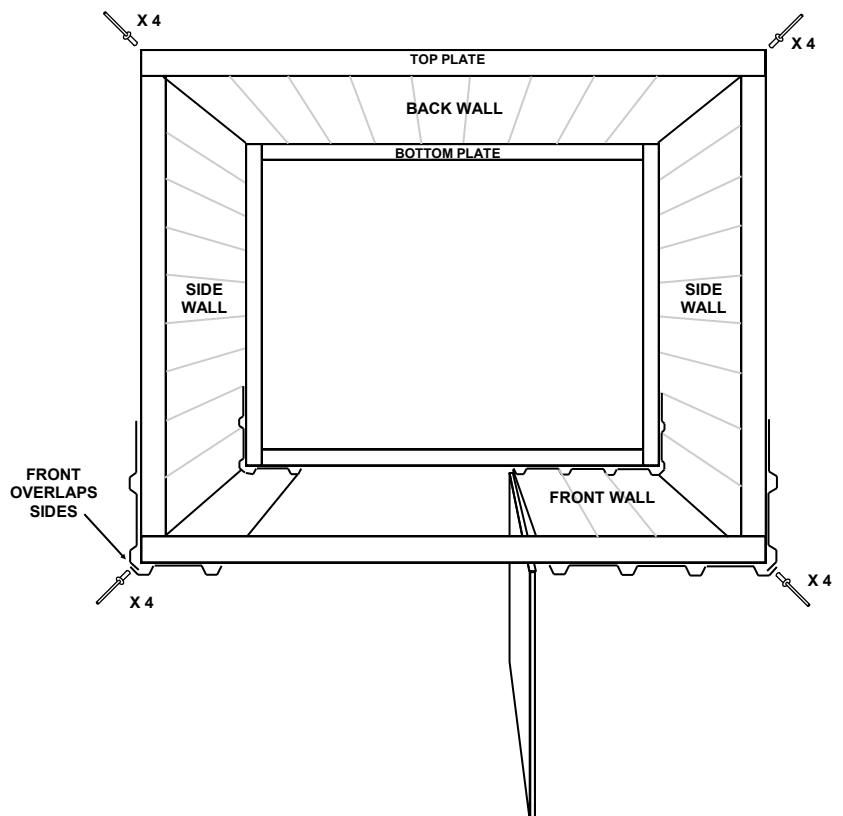

STEP 4:

- Rivet the wall sheets together at the corners using 4 equally spaced rivets as shown.



SELECT:

12 x 1.350 m Roof Sheets
2 x 3.050 m Spouting
4 x 1.350 m Barges
2 x 1.800 m Ridge Flashing
1 x 3.020 m Ridge Beam
2 x 0.200 m Jack Studs
8 x 75mm Screws
76 x 40mm Weatherseal Nails
66 x Rivets

IMPORTANT—FOR SHEDS WITH OPTIONAL CLEAR ROOF PANEL

Assemble as below, making sure that the Clear Roof Sheets overlap the standard roof sheets on both sides.







The Clear Roof Panel must be secured to the Top Plate and the Ridge Beam. Pre drill and fasten with the 40mm weatherseal nails provided..

STEP 1:

- Place the Ridge Beam on a level surface and use 2 x 75mm screws to secure the Jack Studs to the underside of the Ridge Beam, one at each end (**fig. 1**).
- Turn the Ridge Beam /Jack Stud assembly over and place it on the timber Top Plate in a central position.
- Secure with 2 x 75mm screws through the top of the Jack Studs into the Timber Top Plate (**fig. 2**).
- Check that the shed is sitting level and square and that the diagonal Top Plate measurements are the same.

STEP 2:


- Position the first Roof Sheet (slotted end facing front) so that the top of the sheet is at the centre of the Ridge Beam and the side of the sheet over hangs the end of the Ridge Beam (**fig.3**). Using 1 x weatherseal , nail in the top corner. Nail the lower corner ensuring 15mm overhang.
- Position the remaining front Roof Sheets and rivet them together as shown ensuring slots at the front line up with each other.
- Nail the last sheet to the Ridge Beam and the Top Plate ensuring the Roof Sheet overhangs the end of the Ridge Beam and the Top Plate by 15mm.
- Nail front Roof Sheets to Ridge Beam and Top Plate (1 x weatherseal per pan, **fig.4**) ensuring Ridge Beam and Top Plate are straight.
- Repeat with remaining roof sheets

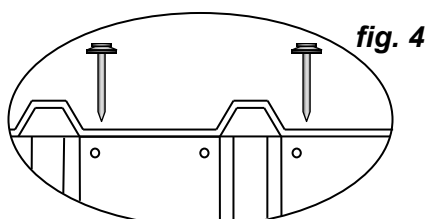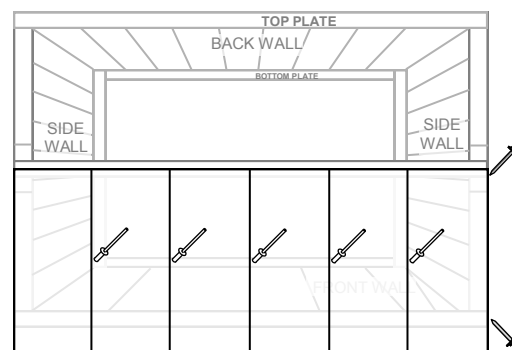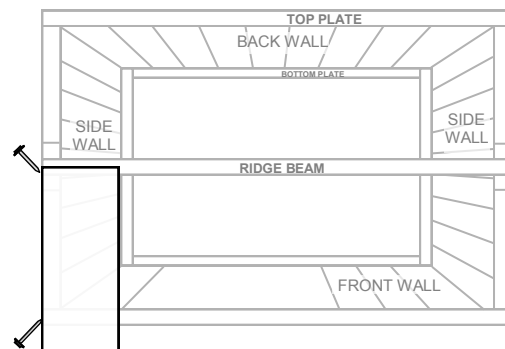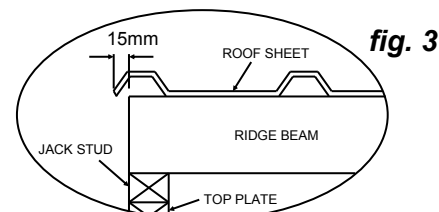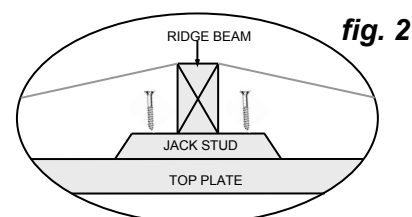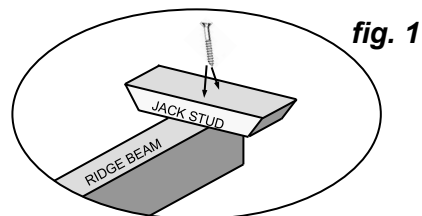




STEP 3:

- Position 1 x roof sheet (slotted end facing back) so that the top of the sheet is at the centre of the Ridge Beam and the side of the sheet over hangs the end of the Ridge Beam and the Top Plate by 15mm.
- Ensure the Ridge Beam and the Top Plate are straight.
- Nail 4 x corners of the Roof Sheet as shown, ensuring the ribs on the Roof Sheet line up with the front Roof Sheet and the back Wall Sheet. Nail off the first sheet.

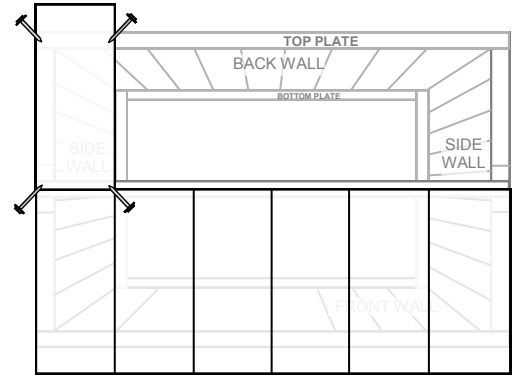

STEP 4:


- Position the second Roof Sheet, ensuring the slots line up with the first sheet.
- Rivet together as shown.
- Nail off as per Step 4.
- Rivet and nail off the remaining Roof Sheets, ensuring the ribs line up with the front Roof Sheets and the back Wall Sheets.

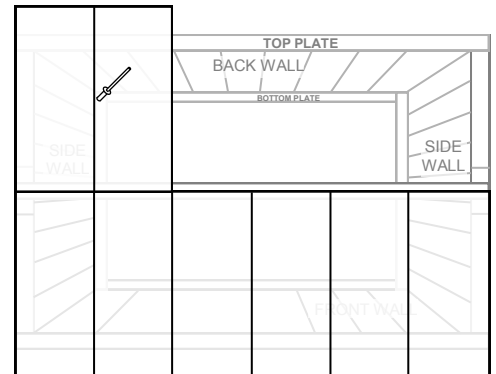

STEP 5:

- Rivet the 2 ridge flashings together using 4 rivets, so total flashing is 3.050m long. Rivet the Ridge Flashing to the centre of the roof using 8 x rivets as shown (fig.1).


fig.1

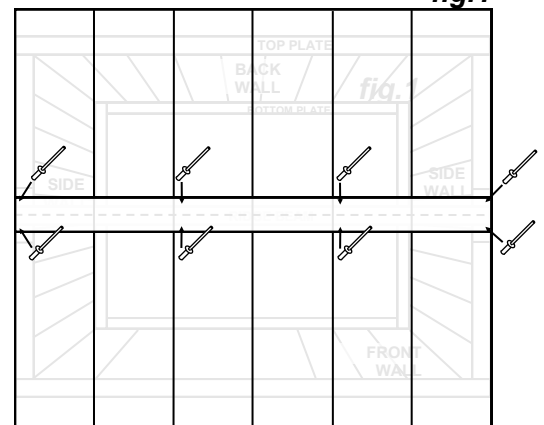

STEP 6:

- Place barge flashings on roof at end of shed ensuring the diagonal trimmed end is facing out.
- Rivet the Barge Flashings to the roof and the side wall, using four rivets on top of barge and four into the side (fig.2).

fig.2

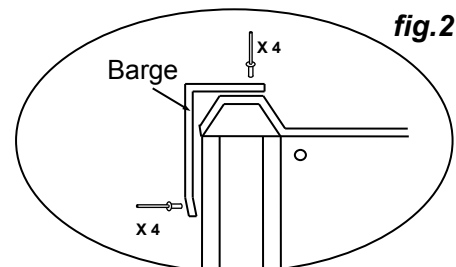

STEP 7:

- Place spouting in position and rivet to Barge Flashings at each end and rivet to roof sheets (1 rivet per 1 sheet). Repeat with remaining spouting.



Secure your shed using Treated Timber Pegs or a Bolt Down Kit

TIMBER PEGS—WOODEN FLOOR

- The optional Duratuf Timber Peg Down Kit includes six H5 treated timber pegs that can be hammered into the ground and then attached to the Base Plate with stainless steel screws. A Sentry timber floor can then be fitted on top of the Base Plate.





BOLT DOWN KIT—CONCRETE

- The optional Duratuf Bolt Down Kit includes 6 x galvanised brackets, screws and dynabolts.
- Space the brackets evenly around the shed and fix to the Bottom Plate and the concrete slab. A 10mm masonry drill bit is required.



OPTIONAL SENTRY FLOOR

- Position the Floor Joists centrally between the side Base Plates and skew nail each end with two 75mm nails.
- Check that the shed is sitting level and square and that the diagonal Bottom Plate measurements are the same.
- Place the floor boards in position and nail securely (10 x 50mm nails per board).

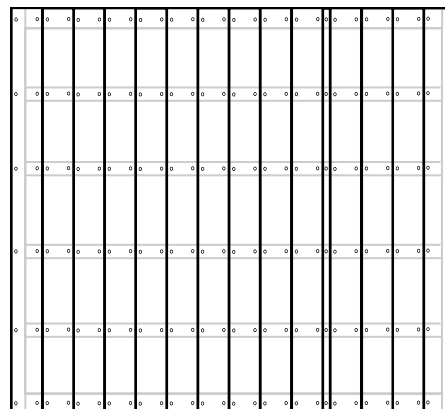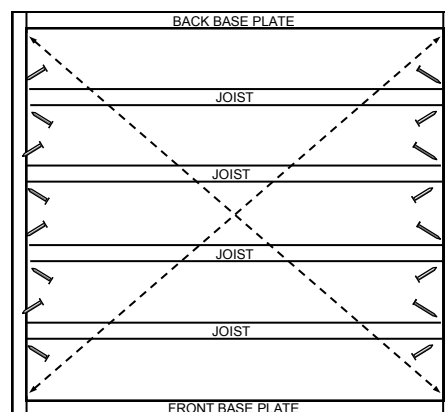

FIT PADBOLT

- Rivet Padbolt to door and keeper onto Door Jamb as shown.




FIT BACK PADBOLT

- Rivet back pad bolts to pad bolt supports then rivet pad bolt supports to back of small door (Top and bottom)
- Using 10mm drill bit, drill hole into top and bottom timber plates

IMPORTANT— CLEAN UP

REMOVE ALL DRILL FILINGS FROM ROOF, WALLS AND CHANNELS THOROUGHLY. FAILURE TO DO THIS WILL RESULT IN CORROSION AND COULD THEREFORE VOID THE WARRANTY.

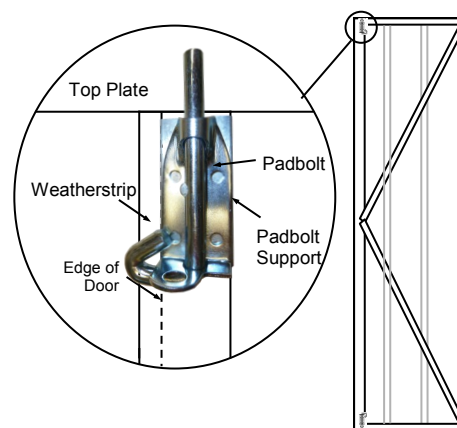

YOUR DURATUF SMARTSTORE SHED IS NOW COMPLETE. RELAX.....



15 YEAR WARRANTY

Riverlea Group Ltd warrant that the cladding used in the manufacture of the Smartstore shed will not rust within 15 years from the date of purchase.

Any liability for product failure that may arise will be limited to repair or replacement of the defective product and will only apply for the benefit of the original purchaser. Riverlea Group Limited will not be liable for any consequential loss or damage, labour, or transport charges.

This warranty is conditional on:

- Construction, installation and maintenance being carried out as specified in the Assembly Instruction Manual.
- The shed being installed in modest inland corrosion zones or areas where the steel corrosion rate is less than 200g/m² (as published by Branz).
- Warranty certificate being returned to manufacturer within 21 days of purchase together with proof of purchase.

This warranty does not cover the following:

- Fastenings and fixings.
- Normal wear and tear, damage by impact or acts of God.
- Situations where the shed has been used for storage of chemicals, manure or corrosion causing products.
- Unauthorized modification of the structure, including painting of the cladding.



WARRANTY REGISTRATION

Please visit <http://www.riverleagroup.co.nz/warranty-garden-sheds> to validate the Warranty on your shed. Click on the Warranty Registration Link and complete all details.

If you are unable to access the computer, please phone us on 0800 438 274 and one of the customer services team will help you to activate the warranty on your garden shed.

Many thanks, from the Team at Riverlea Group.