GM2323 WOODEN FLOOR PACK

Wooden Floor Pack for 2.28m X 2.28m Shed

Floor includes: 15 Floorboards (150mm x 19mm) H3

5 Runners (75mm x 50mm) H4 Tanalised

1 pack galvanised Nails

PTO for floor assembly instructions

Wooden Floor instructions for GM2323 shed

1. Set out 2 of the (75 x 50mm) runners at **2280mm** apart on your shed site. Space the spare runners in between.
2. Straddle #1 floorboard (150 x 19mm) across runners at one end. Place it 25mm in from the end of the 2 outside runners. Temporarily nail at outside corners only for a start.
3. Measure **2235mm** to the other end of the runners and place #2 floorboard 25mm in from edge of runner and temporarily nail at outside corners.
4. Square the floor across from corner to corner diagonally. This should measure approx **3160mm** depending on the accuracy of the precut floorboards and site levels. Check the central runners are evenly spaced between outside runners, check diagonal measurements again and complete nailing off the floorboards #1 and #2.
5. Layout internal floorboards, keeping ends of floorboards flush. Nail off after you have all the floorboards in place using 2 nails per board into each runner. In some cases final floorboard may need to be ripped down. Your floor is now complete.
6. To fix the shed to the floor simply, drill thru the bottom channel and the sheeting of the shed at every 2nd rib. (where there is no rivet). Tap a nail thru the inside lip of the channel into the flooring on the inside of the shed. **This is the only way we recommend to fix your shed to the floor.**

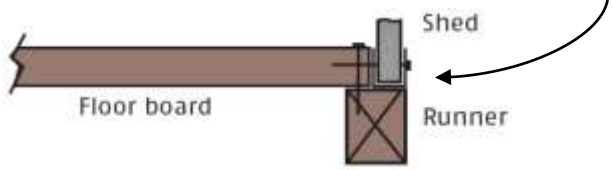

PEG FLOOR TO GROUND IN A WINDY AREA